

TRICRINGS INSTALLATION GUIDE



Step 1. Remove front windshield by removing the 4 bolts that mount to the fairing.



Step 2. There is a small tab opening on top left and right of instrument cluster. Insert screwdriver and pull out cluster.




Step 3. Remove wiring harness from the back of the instrument cluster.



Step 4. Using a 9/64" drill bit, drill horizontally at 3 o'clock position on left headlight. Drill until it goes through the inside console.



Step 5. Repeat step 4 for right hand headlight at approximately 9 o'clock position.

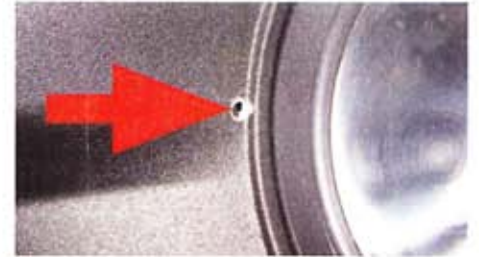

Step 6. You will insert the LED wires through here.



Step 7. Insert the LED wires from both sides and pull through the top



Step 8. Clean the circumference of both headlight circumference with isopropyl alcohol to ensure a clean adhesion.



Step 9. Remove protective backing on the LED ring and position around the headlight and press firmly all around.



Step 10. Pull up and open the provided lever lock connecting block and connect all positive (+) to one block and negative (-) to the other block. Close and lock clasp when done (you can join multiple LED wires together into one terminal)



Step 11. Connect battery positive into toggle switch mark +. (using an inline 10 amp fuse is recommended to protect the system) Connect second red wire from center switch marked "A" to the (+) terminal block. Connect ground to (-) terminal block and run another ground wire from terminal block to toggle switch ground.



Step 12. Find a suitable place to mount your switch and drill approximately 3/4". Push the rocker switch through the top until it locks into place.

THANK YOU FOR YOUR PURCHASE. WE HOPE YOU ENJOY YOUR NEW PRODUCT.
SEE ALL OF OUR UNIQUE LED AND ACCESSORIES AT WWW.TRICLED.COM